

IMPORTANT INFORMATION

Aleda® Micro Adjustable

ID475/476



1. **NB:** Ensure electrical supply is isolated before fitting and/or making any electrical connections. Luminaires should be disconnected from the mains supply before any High Voltage Insulation tests are carried out.
2. Cut a 98mm diameter hole in the mounting surface.
3. **NB:** A minimum ceiling void clearance around cutout of 300mm radius and minimum 60mm above the luminaire is required for ventilation purposes.
4. Bring the mains/dimming cabling through the 98mm hole.
5. Lift the hinged cover of the Driver to reveal the mains/dimming terminals.
6. Make the mains/dimming connections to the Driver according to the information on the Driver cover. The secondary side of Driver is pre-wired and does not require any further wiring.
7. **NB:** If there is no Earth terminal on Driver the mains/dimming cabling into the Driver must be double insulated.
8. Fit the relevant cable grips located under the hinged lid to secure cabling and close lid securely.
9. Feed the Driver through the 98mm hole and locate in the ceiling void.
10. Pivot and rotate the luminaire head to the approximate angle required.
11. Carefully lift the leg of one of the fixing springs and locate into the 98mm hole.
12. Finish the installation by lifting the leg of the second spring and ease into the 98mm hole.
13. Centre the luminaire to ensure none of the cut out is visible.
14. Make final adjustments to the pivot angle and rotation of the luminaire head.
15. **TIP:** If the head has been left in the flush position and is proving difficult to pivot, turn the chrome/coloured reflector trim ant-clockwise to remove which will make pivoting easier, re-fit the trim.
16. Reconnect the electrical supply and test the installation.