


230V ac 50/60Hz

ta: 0°C...+40°C


Ensure electrical supply is isolated before fitting and/or making any electrical connections. Luminaires should be disconnected from the mains supply before any High Voltage Insulation tests are carried out.

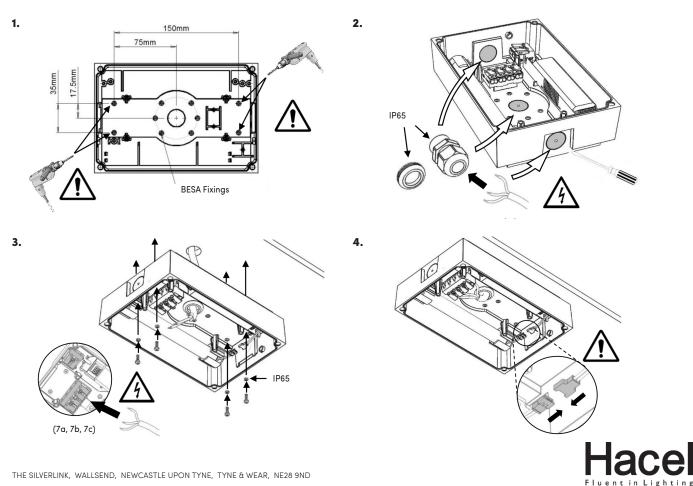

TEGHNIGAL: (0191) 280 9914 E-MAIL: technical@hacel.co.uk WEB: www.hacel.co.uk

Escape Route Variant

R +

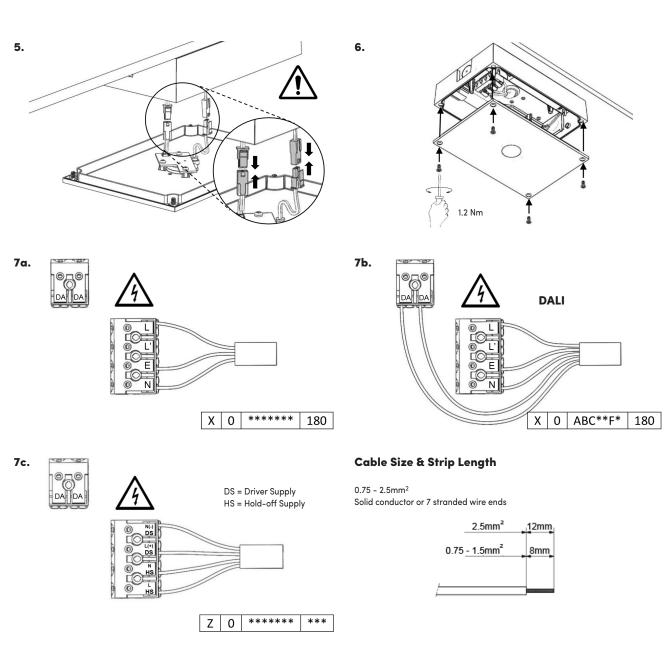

High Bay Variants Only

WARNING: Do not stare at the operating light source.

• The luminaire should be positioned so that prolonged staring into the luminaire at a distance of closer than 1.34m is not expected.

Reconnect the electrical supply and test the installation.

Important

- If the luminaire no longer meets its rated duration of operation after the 24hour battery recharge period, the battery must be replaced.
- For battery replacement order codes, please contact Hacel Lighting.
- Basic insulation is provided between the live supply and DALI control circuits.